


NOTE: If you do not find your watch movement here, please go to www.adidas.com/watches.

CHRONOGRAPH TWO EYE OS11

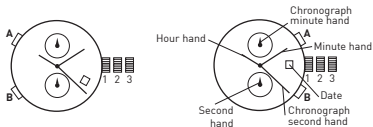

TIME SETTING

1. Pull crown out to position 3.
2. Turn crown to set the desired time.
3. Return crown to position 1.

DATE SETTING

1. Pull crown out to position 2 (the watch continues to run).
2. Turn crown until yesterday's date appears.
3. Pull crown out to position 3 (the watch stops).
4. Turn crown until correct date appears.
5. Continue to turn crown until correct time appears.
6. Return crown to position 1.

CHRONOGRAPH OPERATION

1. Press A to start/stop the chronograph.
2. Press B for reset.

ADJUSTING THE CHRONOGRAPH

1. Pull crown to position 3.
2. Press A to reset the second hand to "0."
3. Press B to reset the chronograph minute hand.
4. Return crown to position 1.

CHRONOGRAPH STOPWATCH OS10 (no date - OS30)


(1 crown/2 pushers)

TIME SETTING

1. Pull crown out to position 3.
2. Turn crown to set the desired time.
3. Return crown to position 1.

DATE SETTING

1. Pull crown out to position 2.
2. Turn crown counter-clockwise until the correct date is shown in the date window.
3. Return crown to position 1.




CHRONOGRAPH OPERATION

1. Press A to start/stop the chronograph.
2. Press B for reset.

ADJUSTING THE CHRONOGRAPH

1. Pull crown to position 3.
2. Press A to reset the second hand to "0."
3. Press B to reset the chronograph minute and hour hands.
4. Reset the watch to the current time and return crown to position 1.

CHRONOGRAPH OS62



SETTING THE TIME

1. Pull crown out to position 3, so that the second hand stops at the zero position.
2. Turn crown to set hour and minute hands.
3. When crown is pushed back to position 1, in synchronization with a time signal, small second hand begins to run.

SETTING THE DATE

1. Pull crown out to position 2.
2. Turn crown counter-clockwise to set the date.
NOTE: If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day.
3. After the date has been set, push crown back to position 1.

USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/20(1/1) second united up to maximum of 12 hours. The retrograde chronograph 1/20(1/1) second hand runs continuously for 60 seconds after starting, and then stops at the zero position.

Measuring time with the chronograph

1. Press B to change the watch to chronograph mode. The second hand stops at zero, and changes to the chronograph 1/20(1/1) second hand.
2. The chronograph can be started and stopped each time A is pressed. The chronograph 1/20(1/1) second hand stops at zero, 60 seconds after starting. When A is pressed to stop the chronograph, the chronograph 1/20(1/1) second hand advances rapidly to display the measured time.
3. Pressing B resets the chronograph and all hands return to their zero positions.
NOTE: Moving of the retrograde chronograph is a demo. Actual measurement will be shown when it is stopped / STOP button is pushed.

CHRONOGRAPH RESET (including after replacing battery)

This procedure should be performed when the chronograph second hand and chronograph 1/20(1/1) second hand do not return to zero after the chronograph has been reset, and including after the battery has been replaced.


1. Pull crown out to position 3.
2. Press A to set the chronograph second hand to zero.
3. Press B to set the chronograph 1/20 second hand to zero. The chronograph hands can be advanced rapidly by continuously pressing A or B.
4. Once the hands have been set to zero, reset the time and return the crown to position 1.
5. Press B to check that the chronograph hands are reset to zero.
NOTE: Do not return crown to position 1 while chronograph second hand and 1/20 chronograph second hand are returning to zero. Each hand stops on the way when crown is returned to position 1, and these positions are recognized as zero positions.

MULTIFUNCTION THREE EYE VX3NE1

[1 crown]

DAY AND TIME SETTING

1. Pull crown out to position 3.
2. Turn clockwise to advance hour and minute hands. *The hand showing days of the week will also move with the hour and minute hands. Keep turning until you have reached the desired day.*



DATE SETTING

1. Pull crown out to position 2.
2. Turn counter-clockwise to advance the date hand.
3. Return crown to position 1.


24-HOUR SUB-DIAL SETTING

The 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.

LED DIGITAL

TIME AND DATE MODE

1. Press A to view time.
NOTE: Animation will be displayed for 2 seconds before time is shown.
2. With time shown, press A to view date.



TIME SETTING

1. Press A to view time.
2. With time shown, press and hold B for 2 seconds.
3. Press A to select 12 or 24 hour format.
4. Press B for next setting field.
5. Press A to set value.
6. Repeat steps 4 and 5 until desired time is reached.
7. Press B to exit time setting mode.

DATE SETTING MODE

1. Press A to view time. With time shown, press A again to view date mode.
2. With time shown, press and hold B for 2 seconds.
3. Press A to set value.
4. Press B for next setting field.
5. Repeat steps 3 and 4 until desired time is reached.
6. Press B to exit date setting mode.

DATE/TIME ANALOG-DIGITAL

SWITCHING DISPLAYS

1. Press A to advance from time mode to calendar mode.
2. Press A again to return to time mode.

TIME/CALENDAR SETTING


1. In normal time display, Press B to enter setting mode; year will begin flashing.
2. Press A to increase setting value.
3. Press B to set and advance to next setting value.
4. Setting sequence is year, month, date, 12/24-hour time, hour, minute, second.
5. Press nothing for 30 seconds, to automatically exit time/calendar setting mode.



10 LAP MEMORY DIGITAL FL145GB

REAL TIME DISPLAY MODE

1. Press A for EL in any mode.
2. Press C to toggle between Time 1 and Time 2.
3. Press and hold C to set Time 1 or Time 2 as the default timer.
4. Press D to toggle chime on/off.



TIME/CALENDAR SETTING

1. In normal time display, press and hold A to enter setting mode; chime will begin flashing.
2. Press C to increase setting value. Press D to decrease setting value.
3. Press B to set and advance to next setting value.
4. Setting sequence is chime, 12/24-hour time, hour, minute, second, year, month, date, Auto EL.
5. Press A to save data and exit setting mode.

CHRONOGRAPH MODE

1. Press B to change to chronograph mode.
2. Press C to start chronograph; press D for lap when the chronograph is running.
3. Press D to change views while chronograph is running.
4. Press C to stop chronograph.

NOTE: When running, there is a maximum of 10 laps, afterward last lap will be overwritten each time additional lap is recorded.

RECALL MODE

1. Press A to recall the memory when the chronograph is stopped.
2. Press A to view the next lap.
3. Press C or D to exit Recall Mode and go back to chronograph mode.

TIMER MODE

1. Press B to change to timer mode.
2. Press C to start timer.
3. Press C to stop timer. Press D to reset the timer when it is stopped.

TIMER SETTING

1. In timer mode, press and hold A to enter setting mode; timer type will begin flashing.
2. Press C and D to select count down stop, count down repeat, or count up timer.
3. Press B to advance to next setting field.
4. Press C to decrease and D to increase.
5. Press B to set and advance to next setting value.
6. Setting sequence is timer type, hour, minute, second.
7. Press A to save data and exit setting mode.

NOTE: Alarm will sound at 2 beeps per second, and will beep for 30 seconds after timer reaches zero.

ALARM MODE

1. Press B to change to alarm mode.
2. Press C to toggle between alarms 1, 2, 3, 4.
3. Press D to enable the alarm; press D again to disable the alarm.
4. Press B to exit alarm mode.

ALARM SETTING

1. In alarm mode, press and hold A to enter setting mode, hour will begin flashing.
2. Press C to increase; press D to decrease.
3. Press B to set and advance to next setting value.
4. Setting sequence is hour, minute.
5. Press A to exit setting mode.

TWEEN ANALOG-DIGITAL

NORMAL TIME DISPLAY

1. Press B to change modes.
2. Press A for EL.
3. Press C to select 12/24 hour format.
4. Press D to enable/disable hourly chime.



TIME SETTING

1. In time mode, press and hold A for 2 seconds to enter time setting; hour will begin flashing.
2. Press C to increase setting value. Press D to decrease setting value.
3. Press B to enter next setting field.
4. Setting sequence is hour, minute, second, year, month, date.
5. Press A to exit setting mode.

ALARM MODE

1. Press B to enter alarm mode.
2. Press C to select alarm 1 or alarm 2.
3. Press D to enable/disable alarm.

ALARM SETTING

1. Press and hold A for 2 seconds to enter alarm setting; hour will begin flashing.
2. Press C to increase setting value. Press D to decrease setting value.
3. Press B to set minutes.
4. Press A to exit setting mode.

Note: Alarm turns on automatically when exiting setting mode.

TIMER MODE

1. Press C to start timer.
2. Press D to stop timer.
3. Press and hold D for 2 seconds to reset timer.

TIMER SETTING

1. In timer mode, press and hold A to enter setting mode; timer type will begin flashing.
2. Press C to select countdown/stop, count-up, or countdown repeat timer.
3. Press B to set and advance to timer preset value.
4. Press C to increase setting value; press D to decrease setting value.
5. Press A to exit setting mode.

CHRONO MODE

1. Press B to enter chrono mode.
2. Press C to start chrono.
3. Press D to stop chrono.

4. Press and hold D for 2 seconds to reset chrono.

NOTE: Maximum chrono time is 23 hours, 59 minutes, and 59 seconds. When chrono reaches maximum time, it will stop running. Press and hold D to reset value to run chrono. 1/00s resolution for first 59 minutes and 59.99 seconds.

KIDS DIGITAL

TIME MODE

1. Press B to change modes.
2. Press A for EL.
3. Press C to select 12/24 hour format.
4. Press D to enable/disable hourly chime.



TIME SETTING

1. In time mode, press and hold A for 2 seconds to enter time setting.
2. Press C to increase setting value. Press D to decrease setting value.
3. Press B to enter next setting field.
4. Press pusher A to exit setting mode.

ALARM MODE

1. Press B to enter alarm mode.
2. Press A for EL.
3. Press C to select alarm 1 or alarm 2.
4. Press D to enable/disable alarm.

ALARM SETTING

1. Press and hold A for 2 seconds to enter alarm setting.
2. Press C to increase setting value. Press D to decrease setting value.
3. Press B to enter next setting field.
4. Repeat steps 2 and 3 until desired time is selected.
5. Press A to exit setting mode.

Note: Alarm turns on automatically when exiting setting mode.

CHRONO MODE

1. Press B to enter chrono mode.
2. Press C to start chrono.
3. Press D to stop chrono.
4. Press and hold D for 2 seconds to reset chrono.

NOTE: Maximum chrono time is 23 hours, 59 minutes, and 59 seconds. When chrono reaches maximum time, it will stop running. Press and hold D to reset value to run chrono. 1/00s resolution for first 59 minutes and 59.99 seconds.

10 LAP DIGITAL

NORMAL TIME DISPLAY

1. Press A for EL.
2. Press C to select T1 or T2 format.



TIME SETTING

1. In time mode, press and hold D for 2 seconds to enter time setting; hour will begin flashing.
2. Press C to increase setting value.
3. Press B to enter next setting field.
4. Setting sequence is hour, minute, day, year, month, date.
5. Press D to exit setting mode.

ALARM MODE

1. Press B to enter alarm mode.
2. Press C to toggle alarm/chime on/off.
3. Press D to select Home Alarm or T2 Alarm.

ALARM SETTING

1. Press and hold D for 2 seconds to enter alarm setting; hour will begin flashing.
2. Press C to increase setting value.
3. Press B to set minutes.
4. Press D to exit setting mode.

Note: Alarm turns on automatically when exiting setting mode.

CHRONO MODE

1. Press B to enter chrono mode.
2. Press D to select split or lap mode. Split mode will display the full time of all records after each split. Lap mode will display only the new lap time after each record has been recorded.
3. Press C to start chrono.
4. Press C again to split time.
5. Repeat step 4 until desired number of laps have been reached (maximum 10).
6. Press D to stop chrono.
7. To review, press B to enter recall mode before resetting.
8. Press D again to reset chrono.

RECALL MODE

1. Press C to recall each lap (10 maximum).
2. Press D to return to chrono.

TIMER MODE

1. Press C to start countdown timer.
2. Press D to stop countdown timer. Press D again to reset timer.

TIMER SETTING

1. Press B to enter timer mode.
2. Press and hold D to enter setting mode; hour will begin flashing.
3. Press C to increase setting value.
4. Press B to enter next setting field.
5. Setting sequence is hour, minute, second.
6. Press D to exit setting mode.

TWIN ANALOG-DIGITAL

NORMAL TIME DISPLAY

1. Press A for EL.
2. Press E to toggle chime on/off.
3. Press and hold B to turn off LCD screen. Press and hold B again for day and date. Press and hold B again for normal time mode.



TIME SETTING

1. In time mode, press and hold A; city will begin flashing.
2. Press E to increase setting value and/or D to decrease setting value.
3. Press B to advance to next setting field.
4. Setting sequence is city, hour, minute, second, DST on/off, year, month, date, 12/24 hour format, month-date format.
5. Press A to exit.

ALARM MODE

1. Press B to enter alarm mode.
2. Press E to enable/disable alarm.

ALARM SETTING

1. In alarm mode, press and hold A to enter alarm setting mode; hour will begin flashing.
2. Press E to increase setting value and/or D to decrease setting value.
3. Press B to advance to minute.
4. Press A to exit.

NOTE: Alarm status will be ON automatically after exit the AL setting mode. No button operation for 60 seconds will auto-exit display with changes saved, but alarm status is OFF.

WORLD TIME MODE

1. Press B to enter world time mode.
2. Press E and D to scroll up/down through cities.
3. Press C to turn on/off DST (Daylight Savings Time).
4. Press A when finished.
5. Press and hold A to exchange world time for local time.

WORDS	CITY	HOOR DIFFERENCE
MDY	Midway	-11 hours
HNL	Honolulu	-10 hours
ANC	Anchorage	-9 hours
LAX	Los Angeles	-8 hours
DEN	Denver	-7 hours
CHI	Chicago	-6 hours
NYC	New York	-5 hours
CCS	Caracas	-4 hours
RIO	Rio de Janeiro	-3 hours
ATA	Antarctica	-2 hours
CPV	Cape Verde	-1 hour
LON	London	0 hours
PAR	Paris	+1 hour
CAI	Cairo	+2 hours
MOW	Moscow	+3 hours
DXB	Dubai	+4 hours
KHI	Karachi	+5 hours
DAC	Dacca	+6 hours
BKK	Bangkok	+7 hours
HKG	Hong Kong	+8 hours
TYO	Tokyo	+9 hours
SYD	Sydney	+10 hours
NOU	Noumea	+11 hours
AKL	Auckland	+12 hours

TIMER MODE

1. Press B to enter timer mode.
2. Press E to select TIMER 1, 2 or 3.
3. Press C to start timer.
4. Press D to stop.
5. Press and hold D to reset timer.

NOTE: Maximum timer setting is 12 hours. When CD-REP is selected, loops 99 times maximum.

TIMER SETTING MODE

1. In timer mode, press and hold A to enter timer setting mode.
2. Press E to select CD-STP, CD-REP, or CD-UP.
3. Press B to advance to timer preset value.
4. Press E to increase setting value. Press D to decrease setting value.
5. Press A to exit setting mode.

CHRONO MODE

1. From any mode, press and hold E to enter chrono mode.
2. Press C to start chronograph.
3. Press D to stop chronograph.
4. Press and hold A to save data (if desired).
5. After data is saved, press A to return to chrono mode. If no data is saved, press and hold D to reset chronograph.
6. Press B to return to time mode.

NOTE: While chrono is running, press E to change chrono views.

SPLIT/LAP

1. Press C to start chronograph.
2. Press C again to take lap reading.
3. Continue pressing C for desired number of laps (50 maximum).
4. Press D to stop chronograph.
5. Press and hold A to save data (if desired).
6. After data is saved, press A to return to chrono mode. If no data is saved, press and hold D to reset chronograph.

NOTE: Maximum number of laps is 50. User cannot make a lap before 1 second from the last lap measurement. If data allocation is full, display will prompt user to delete stored data (oldest data will be offered for deletion first). SET-1 data can only be deleted manually in data mode.

MY LOG MODE

1. Press B to enter data mode.
2. Press D to view stored sets. Press and hold D to delete current set. Press and hold D further for 2 seconds to clear all stored sets.
3. Press C to view total, best, average, and laps of current set.

50 LAP DIGITAL



10-30 LAP DIGITAL



NORMAL TIME DISPLAY

1. Press A for EL.
2. Press B to change modes. Mode sequence is time, my log, alarm, timer.
3. Press D to flash to TIME 2; press and hold D to toggle TIME 1 and TIME 2.
4. Press E to toggle chime on/off. Press and hold E for chronograph mode on 50 Lap Digital Models. On 10-30 Lap Digital Models, press and hold E for timer mode.
5. Press and hold A, B, D and E for 5 seconds to master reset the watch. All data will be erased, and all settings will be set to default.

TIME/CALENDAR SETTING

1. In normal time display, press and hold A to enter setting mode; hour will begin flashing.
2. Press E to increase setting value. Press D to decrease setting value.
3. Press B to set and advance to next setting value.
4. Setting sequence is hour, minute, second, year, month, date, 12/24-hour time, date format.
5. Press A to save data and exit setting mode.

ALARM MODE

1. Press B to change to alarm mode.
2. Press D to toggle between alarms 1 and 2.
3. Press E to toggle alarm on/off.

ALARM SETTING

1. In alarm mode, press and hold A to enter setting mode; hour will begin flashing.
2. Press D to decrease; press E to increase.
3. Press B to set and advance to next setting value.
4. Setting sequence is hour, minute, T1/T2.
5. Press A to save data and exit setting mode.

NOTE: Alarm status will be ON automatically after exit the ALARM SETTING mode. No button operation for 60 seconds will auto-exit with changes saved, but alarm status OFF.

TIMER MODE

1. Press B to change to timer mode on 50 Lap Digital Models. On 10-30 Lap Digital Models, press and hold E to change to timer mode.
2. Press C to start timer.
3. Press D to stop timer. Press and hold D to reset the timer when it is stopped.
4. Press E for next timer.

NOTE: For 50 Lap Digital Models, there are 3 timers. For 10-30 Lap Digital Models, there are 5 timers.

TIMER SETTING

1. In timer mode, press and hold A to enter setting mode; timer type will begin flashing.
2. Press D and E to select count up timer, count down stop, or count down repeat, or interval timer (see interval timer setting for separate instructions).
3. Press B to advance to next setting field.
4. Press D to decrease and E to increase.
5. Press B to set and advance to next setting value.
6. Setting sequence is timer type, hour, minute, second.
7. Press A to save data and exit setting mode.

INTERVAL TIMER SETTING

1. In timer mode, press and hold A to enter setting mode; timer type will begin flashing.
2. Press D or E to select interval timer.
3. Press B to advance to next setting field.
4. Press D to decrease and E to increase.
5. Press B to set and advance to next setting value.
6. Setting sequence is timer type (interval), hour, minute, second.
7. Press A to save data and advance to the next segment.
8. Repeat steps 5 and 6 until desired number of segments have been set (5 maximum for 50 Lap Digital Models, 6 maximum for 10-30 Lap Digital Models).

NOTE: When running, segments loop maximum 99 times.

CHRONOGRAPH MODE

1. From any mode, press and hold E for 2 seconds to change to chronograph mode on 50 Lap Digital Models. On 10-30 Lap Digital Models, press B to change to chronograph mode.
2. Press C to start chronograph; press C for lap when the chronograph is running.
3. Press E to change views while chronograph is running. Select between current lap, total, or both.
4. Press D to stop chronograph when it is running; press and hold D to reset to zero when the chronograph is stopped or press and hold A to save data to MY LOG.

NOTE: On 50 Lap Digital Models, the maximum number of laps is 50. On 10-30 Lap Digital Models, the maximum number of laps is 10 or 30.

MY LOG MODE


1. Press B to change to my log mode.
2. Press E to view data within the selected SET.
3. Press D to advance through saved sets. Press and hold D to clear selected set.
Continue holding to clear all sets.
4. Press and hold E to race against any SET. This will put you in SHADOW RACE mode.

SHADOW RACING (only on 50 Lap Digital Models)

This function allows you to easily race against yourself from a previously stored session of data that can be found under "MY LOG." Take a lap reading at the marker and the watch will tell you how you compare to your previous race.

1. Press B to change to MY LOG mode.
2. Press D and E to select set of data to race against.
3. Press and hold E to enter shadow racing chronograph.
NOTE: See chronograph mode instructions for chronograph operation.
4. Press and hold A to save run data when the chronograph is stopped.
5. Press B to return to normal time display.

100 LAP FRONT BUTTON PLUS DIGITAL

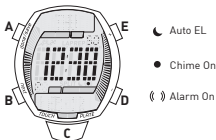

NORMAL TIME DISPLAY

1. Press A for EL.
2. Press B to change modes.
3. Press C for EL; press and hold C to toggle Auto EL on/off. When Auto EL is on, press any key for EL.
4. Press D to flash Time Zone 2; press and hold D to toggle Time Zone 2 mode/normal time display.
5. Press E for Chronograph mode; press and hold E to toggle chime on/off.
NOTE: To master reset the watch, press and hold A, B, D and E for 5 seconds. All data will be erased, and all settings will be set to default.

TIME/CALENDAR SETTING

1. In normal time display, press and hold A to enter setting mode; touch/ask me off will begin flashing.
2. Press D to toggle touch/ask me on/off.
NOTE: If touch/ask me is set to on, you will be asked in chronograph mode if you want to activate the touch plate.
3. Press B to set and advance to next setting value.
4. Press D to decrease; press E to increase.
5. Setting sequence is: touch/ask me, city, hour, minute, second, DST on/off, year, month, date, 12/24-hour time.
6. Press A to save data and exit setting mode.

TIME ZONE 2 MODE

1. In normal time display, press and hold D to enter time zone 2 mode; city will be at the top of the display.
2. Press and hold E to make the time zone 2 city the normal time. All functions of the normal time setting mode will carry over to the new time zone.

TIME ZONE 2 SETTING

1. In time zone 2 mode, press and hold A to enter setting mode; city will begin flashing.
2. Press D for previous city; press E for next city.
3. Press C to toggle DST on/off.
4. Press A to save data and exit setting mode.

HKG	Hong Kong	LAX	Los Angeles	LON	London
TYO	Tokyo	DEN	Denver	PAR	Paris
SYD	Sydney	CHI	Chicago	CAI	Cairo
NOU	Nourmea	NYC	New York City	MOW	Moscow
ACK	Auckland	CCS	Caracas	DXB	Dubai
MDY	Midway	RIO	Rio de Janeiro	KHI	Karachi
HNL	Honolulu	ATA	Antarctica	DAC	Dacca
ANC	Anchorage	CPV	Cape Verde	BKK	Bangkok

MY LOG MODE/VIEWING SETS

NOTE: In order to retrieve data in my log mode, you must first have saved information in chronograph mode.

1. Press B to change to my log mode.
2. Press and hold A to edit set label.
3. Press C to view set data; press D and E to scroll through laps, lap total, best and average lap data.
4. Press C to exit set.
5. Press D for previous set; press and hold D to clear selected set. Continue holding to clear all sets.
6. Press E for next set. Hold to shadow race.

NOTE: For quick return to normal time display, press and hold B for 2 seconds.

EDITING SET LABELS

1. In my log mode, press and hold A to edit set label.
2. Press D to decrease letter, press E to increase letter.
3. Press B to set and advance to next letter.
4. Press A to save set label and exit setting mode.

ALARM MODE

1. Press B to change to alarm mode.
2. Press D to toggle between alarms 1 and 2.
3. Press E to toggle alarm on/off.

Note: For quick return to normal time display, press and hold B for 2 seconds.

ALARM SETTING

1. In alarm mode, press and hold A to enter setting mode; hour will begin flashing.
2. Press D to decrease; press E to increase.
3. Press B to set and advance to next setting value.
4. Setting sequence is hour, minute, normal time/time zone 2 city.
5. Press A to save data and exit setting mode.

TIMER MODE

1. Press B to change to timer mode.
2. Press D and E to select timer.

NOTE: For quick return to normal time display, press and hold B for 2 seconds.

NOTE: There are 5 timers set to the following default values: Timer 1 is 3 minutes, Timer 2 is 5 minutes, Timer 3 is 10 minutes, Timer 4 is 30 minutes, Timer 5 is 1 hour.

USING THE TIMER

1. Press C to start timer.
2. Press D to stop timer. Press and hold D to reset.

TIMER SETTING

1. In timer mode, press and hold A to enter setting mode; timer type will begin flashing.
2. Press D and E to select count up timer, count down stop, or count down repeat.
3. Press B to set and advance to hour.
4. Press D to decrease and E to increase.
5. Press B to set and advance to next setting value.
6. Setting sequence is timer type, hour, minute, second.
7. Press A to save data and exit setting mode.

INTERVAL TIMER MODE

1. Press B to change to interval timer mode.
2. Press D to scroll through timers.
3. Press E to view different segments within each interval set.

NOTE: Module can store up to 3 interval sets, each of which can have a maximum of 6 segments.

USING THE INTERVAL TIMER

1. Press C to start timer.
2. Press E while interval timer is running to toggle views.
3. Press D to stop timer. Press and hold D to reset.

INTERVAL TIMER SETTING

1. In interval timer mode, press and hold A to enter setting mode; timer type will begin flashing.
2. Press D and E to select count down stop or count down repeat timer.
3. Press B to set and advance to hour.
4. Press D to decrease and E to increase.
5. Press B to set and advance to next setting value.
6. Setting sequence is timer type, hour, minute, second.
7. Press B to advance to next segment, and repeat hour, minute, second setting.
8. Press A to save data and exit setting mode.

EDITING SEGMENTS

1. In interval timer mode, press D to select the timer.
2. Press E to select segment within the interval timer.
3. Press and hold A to edit segment; hour will begin flashing.
4. Press D to decrease and E to increase.
5. Press B to set and advance to next setting value.
6. Setting sequence is hour, minute, second.
7. Press A to save data and exit setting mode.

CHRONOGRAPH MODE

Your watch is equipped with the ability to turn the front button into a touch sensitive

plate. To activate the touch sensitive plate, set touch/ask me to "on" in time/calendar setting. In chronograph mode, when asked if you want to activate the touch plate, select "on."

When touch mode is active, press C to start the chronograph and take lap readings. The watch case-back and front button must be in contact with your skin for the touch option to work (touch mode will not work if you are wearing the watch over clothing or gloves). Also, the touch option does not work in water; it is meant for dry conditions only. Keep the front pusher and case-back clean for optimum performance. Remember to remove the caseback sticker after purchase.

1. From normal time display, press E to change to Chronograph mode.
NOTE: When entering chronograph mode, Free Memory Screen will flash on display, showing the free lap and free set memory. If no data is stored, "memory full" will display.
2. Press B to return to Normal Time Display.
3. Press and hold A to use race calculator before starting the chronograph.
4. Press C to start chronograph.
5. Press C for lap when the chronograph is running (up to 100 laps).
6. Press D to stop chronograph.
7. Press A to save run data when the chronograph is stopped.
8. Press and hold D to reset to zero when the chronograph is stopped.

RACE CALCULATOR

This function helps you to set benchmarks for every k/mile. Take a lap reading at the marker and the watch will tell you how you compare to your ideal tempo.

1. In chronograph mode, press and hold A; mile/km units will begin flashing.
2. Press D and E to select kilometers or miles.
3. Press B to set and advance to next setting value.
4. Press D to decrease and E to increase.
5. Setting sequence is km/mile, distance 1-50, time goal hour, time goal minute, time goal second.
6. Press A to select save data or race against data.
7. Press D to save data; press E to race against data and exit setting mode.
NOTE: Default set label will be set distance.

SHADOW RACING

This function allows you to easily race against yourself from a previously stored session of data that can be found under "MY LOG." Take a lap reading at the marker and the watch will tell you how you compare to your previous race.

1. Press B to change to My Log mode.
2. Press D and E to select set of data to race against.
3. Press and hold E to enter shadow racing chronograph.
NOTE: See chronograph mode instructions for chronograph operation.
4. Press and hold A to save run data when the chronograph is stopped.
NOTE: User is then prompted to edit set label.
5. Press B to return to Normal Time Display.

REFEREE WATCH

NORMAL TIME DISPLAY

1. Press A for EL.
2. Press B to change modes. Mode sequence is time, referee, timer type, chronograph, my log, alarm.
3. Press D to flash to TIME 2; press and hold D to toggle TIME 1 and TIME 2.
4. Press E to toggle chime on/off.
5. Press and hold A, B, D and E for 5 seconds to master reset the watch. All data will be erased, and all settings will be set to default.



TIME/CALENDAR SETTING

1. In normal time display, press and hold A to enter setting mode; auto EL "ON" will begin flashing.
2. Press E to increase setting value. Press D to decrease setting value.
3. Press B to set and advance to next setting value.
4. Setting sequence is hour, minute, second, year, month, date, 12/24-hour time, date format.
5. Press A to save data and exit setting mode.

REFEREE MODE

1. Press B to change to Referee Mode.
2. Press D to select desired game time.
3. Setting sequence is Set 1, Set 2, Set 3, 45:00, 15:00, 40:00, 35:00, 30:00, 25:00, 20:00, 10:00, 5:00.
4. Press C to start timer.
5. Press C again to stop main timer, however overall game time will continue to run at bottom.
6. Press C again to start timer again.
7. Press D to stop overall game time.
8. Press and hold D to reset timer when it is stopped.

REFEREE TIME SETTING

1. In Referee mode, press D to advance to Set 1, Set 2 or Set 3.
2. Press and Hold A to enter setting mode; hour will begin flashing.
3. Press E to increase setting value. Press D to decrease setting value.
4. Press B to set and advance to next setting value.
5. Setting sequence is hour, minute, second.
6. Press A to save data and exit setting mode.

THERE ARE 3 TYPES OF TIMERS:

Interval Timer, Timer, Training Timer.

1. Press B to change to Timer Mode, which ever timer was last chosen will be the option to pop up.

2. Press E to change type of Timer.
3. Setting sequence is interval, timer, training.

INTERVAL TIMER SETTING

1. In Interval Timer mode, press and hold A to enter setting mode; interval segment will begin flashing.
2. Press B to advance to next setting field.
3. Press D to decrease and E to increase.
4. Press B to set and advance to next setting value.
5. Repeat steps 3 and 4 until desired number of segments have been set.
6. Setting sequence is segment, minute, second.
7. Press A to save data when all segments have been set.
8. Press C to start interval timer.
9. Press D to stop timer and press and hold to reset.

NOTE: When running, segments loop maximum 60 times.

TIMER SETTING

1. In timer mode, press and hold A to enter setting mode; timer type will begin flashing.
2. Press D and E to select count down stop, or count down repeat, or count up timer.
3. Press B to advance to next setting field.
4. Press D to decrease and E to increase.
6. Setting sequence is timer type, hour, minute, second.
7. Press A to save data and exit setting mode.
8. Press C to start timer.
9. Press D to stop timer. Press and hold D to reset the timer when it is stopped.
10. Press E for next timer.

TRAINING TIMER SETTING

1. In Training Timer mode, press and hold A to enter setting mode; T1 minute will begin flashing.
2. Press B to advance to next setting field.
3. Press D to decrease and E to increase.
4. Repeat steps 2 and 3 until both T1 and T2 are set.
5. Press B to advance to cycle setting.
6. Setting sequence is T1 minute and second, T2 minute and second, cycle.
7. Press A to save data when all segments have been set.
8. Press C to start training timer.
9. Press D to stop timer and press and hold to reset.

NOTE: When running, segments loop maximum 50 cycles.

CHRONOGRAPH MODE

1. Press B to change to chronograph mode.
2. Press C to start chronograph; press C for lap when the chronograph is running.
3. Press E to change views while chronograph is running. Select between current lap, total, or both.

4. Press D to stop chronograph; press and hold D to reset to zero when the chronograph is stopped.
5. Press and hold A to save data to MY LOG.

MY LOG MODE

1. Press B to change to my log mode.
2. Press E to view data within the selected SET.
3. Press and hold E to race against any SET. This will put you in SHADOW RACE mode.
4. Press D to advance through saved sets.
5. Press and hold D to clear selected set. Continue holding to clear all sets.

NOTE: You can save up to 100 total laps in the memory.

SHADOW RACING

This function allows you to easily race against yourself from a previously stored session of data that can be found under "MY LOG." Take a lap reading at the marker and the watch will tell you how you compare to your previous race.

1. Press B to change to MY LOG mode.
2. Press D to select set of data to race against.
3. Press and hold E to enter shadow racing chronograph.
4. Press C to start shadow race mode.
5. Press and hold A to save run data when the chronograph is stopped.

NOTE: Shadow race mode will beep 5 seconds before reaching previous stored lap time.

ALARM MODE

1. Press B to change to alarm mode.
2. Press D to toggle between alarms 1 and 2.
3. Press E to toggle alarm on/off.
4. Press and hold A to set the alarm.
5. Press E to increase setting value. Press D to decrease setting value.
6. Press B to set and advance to next setting value.
7. Setting sequence is hour, minute, T1-T2.
8. Press A to save data and exit setting mode.

NOTE: Alarm status will be ON automatically after exit the ALARM SETTING mode. No button operation for 60 seconds will auto-exit with changes saved, but alarm status OFF.

USE PRECAUTIONS - RESISTANCE TO WATER

All adidas timepieces are designed to withstand use as indicated on the following chart.

INDICATION		WATER-RELATED USE				
		Light spray perspiration, light rain, etc.	Bathing, etc.	Swimming, etc.	Skin diving, (without oxygen cylinder)	Scuba diving, (with air cylinder)
Level of resistance	Caseback marking					
	30 METERS	3 ATM	NO	NO	NO	NO
3 ATM		OK	NO	NO	NO	NO
5 ATM		OK	OK	NO	NO	NO
10 ATM		OK	OK	OK	NO	NO
20 ATM		OK	OK	OK	OK	NO
30 ATM		OK	OK	OK	OK	OK

Always set the crown in position 1 (the normal position).
Tighten screw-down crown completely, if applicable.

TWO (2) YEAR INTERNATIONAL WARRANTY

Your adidas watch is warranted by adidas watches* for a period two (2) years from the original date of purchase under the terms and conditions of this warranty. The adidas warranty covers materials and manufacturing defects. A copy of the receipt or dealer stamp in the warranty booklet is required for proof of purchase.

During the warranty period the watch movement, hands and dial are the only components covered under this warranty. A covered component will be repaired or the watch will be replaced free of repair charges, if it proves to be defective in material or workmanship under normal use.

In case of replacement, adidas cannot guarantee that you will receive the same model watch. If your model is not available, a watch of equal value and similar style will be provided. The warranty for the replacement watch ends two (2) years from the date the replacement watch is received.

THIS WARRANTY DOES NOT COVER:

- Any defects in materials and workmanship of battery, case, crystal, strap or bracelet.
- Damage resulting from improper handling, lack of care, accidents, or normal wear and tear.
- Water damage unless marked water-resistant.

This warranty is void if the watch has been damaged by accident, negligence of persons other than authorized adidas sales or services agents, unauthorized service, or other factors not due to defects in materials or workmanship.

The foregoing warranties and remedies are exclusive and in lieu of all other warranties, terms or conditions, express, implied or statutory, as to any matter whatsoever, including, without limitation, warranties of merchantability, fitness for a particular purpose, accuracy, satisfactory quality, title, and non-infringement, all of which are expressly disclaimed by adidas. adidas shall not be liable for incidental, consequential, indirect, special or punitive damages or liabilities of any kind arising out of or in connection with the sale or use of this product, whether based in contract, tort (including negligence), strict product liability or any other theory, even if adidas has been advised of the possibility of such damages and even if any limited remedy specified herein is deemed to have failed of its essential purpose. adidas' entire liability shall be limited to replacement or repair of the purchase price paid, at adidas' sole option.

Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages so the above limitations and exclusions may be limited in their application to you. When implied warranties may not be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights; you may have other rights that may vary depending on local law. Your statutory rights are not affected.

REQUESTING WARRANTY AND OTHER WATCH REPAIR

Should you require work under warranty, please send in your watch, a copy of your

sales receipt and/or the warranty booklet with dealer stamp and a description of the problem to the authorized international watch service center closest to you (see enclosed list of addresses).

For service work that is not covered under this warranty, the service center may perform the services you request for a charge dependent on watch style and type of work requested. These charges are subject to change.

Do not send original packaging, as it will not be returned. adidas highly recommends you insure your parcel and adequately protect the watch during shipment. adidas is not responsible for product lost or damaged during shipment.

For repairs of your adidas watch we recommend that you contact an authorized adidas dealer or the authorized international watch service center closest to you (see enclosed list of addresses).

*10615 Sanden Drive, Dallas, Texas 75238 USA

INTERNATIONALE ZWEI (2)-JAHRES-GARANTIE

Auf Ihre adidas-Armbanduhr gewährt adidas watches* eine Garantie gemäß der vorliegenden Garantiebedingungen für die Dauer von zwei (2) Jahren ab dem ursprünglichen Kaufdatum. Diese Garantie erstreckt sich auf Herstellungs- oder Materialfehler. Eine Kopie der Quittung oder ein Händlernachweis (Stempel im Garantieheft) werden als Kaufbeleg benötigt.

Diese Garantie erstreckt sich nur auf die Garantielaufzeit und in diesem Zeitraum nur auf das Uhrwerk, die Zeiger und das Ziffernblatt. Von der Garantie gedeckte Bauteile werden repariert oder die Armbanduhr ohne Berechnung von Reparaturkosten ersetzt, wenn das Bauteil während der Garantielaufzeit Herstellungs- oder Materialfehler aufweist.

Im Ersatzfall kann adidas keine Gewähr dafür übernehmen, dass Sie eine Armbanduhr desselben Modells erhalten. Falls Ihr Modell nicht verfügbar ist, erhalten Sie eine Uhr im selben Wert und ähnlichen Design. Die Garantie auf die als Ersatz erhaltene Uhr endet zwei (2) Jahre nach dem Erhalt der Ersatzuhr.

DIESE GARANTIE UMFASST NICHT:

- Herstellungs- oder Materialfehler an Batterie, Gehäuse, Glas, Armband oder Armreif.
- Beschädigung durch unsachgemäße Behandlung, mangelnde Sorgfalt, Unfälle, oder normale Abnutzung.
- Beschädigung durch Wasser, sei denn, die Uhr ist als wasserfest gekennzeichnet.

Diese Garantie verliert ihre Gültigkeit, wenn die Armbanduhr durch Unfall, Unachtsamkeit durch andere als autorisierte Vertriebs- oder Service-Agenten von adidas, Wartung oder Reparatur durch andere als Servicepartner, oder andere Faktoren und Ereignisse beschädigt wird, die nicht herstellungs- oder materialbedingt sind.

AUTHORIZED SERVICE CENTERS

AUSTRALIA

Fossil Management Services
Pty Limited
Unit 6 Allambie Grove
25 Frenchs Forest Road
Frenchs Forest NSW 2086
tel: (61) 2 9453 0288
fax: (61) 2 9453 0299

AUSTRIA

Fossil Austria GmbH
z.Hnd. Adidas Service
Hertha Firnberg Strasse 3/43
A-1100 Wien
Service Hotline: 0810-300450
tel: 01-6418884-0
fax: 01-6418884-10

AZERBAIJAN

Golden
10 Azerbaijan st.,
5 quarter
P.O. Box AZ 5000
Sumgait,
tel/fax: +99412 418 47 25

BELGIUM

Tapernoux & Cie
Avenue Molière 142
150 Bruxelles
tel: +32 2349 1511
fax: +32 2343 8547
e: tapernoux@skynet.be

BOSNIA-HERZEGOVINIA

Watch Line D.O.O.
Brace Begic 21
71 000 Sarajevo
tel: +387-33-215-930
fax: +387-33-215-930

BULGARIA

Ametist 99, Ltd
96-b Rakovski str.
Sofia 1000
Galdini shop
tel: + 359 - 2- 981 9223

CANADA

124 Connie Crescent
Unit 7
Concord, Ontario
L4K 1L7
tel: 1-866-636-7745
fax: 905-760-9338

CROATIA

Korum Trgovina d.o.o.
Vlaska 55
HR-10000 Zagreb/Croatia
tel: (3851) 46 97 788
fax: (3851) 46 16 424
email: boz@korum.hr

CYPRUS

A. Stephanides & Son Ltd.
Watches Service Centres
Arnaldas 10 1060 Nicosia-Cyprus
tel: +357 22759915
fax: +357 22767230
email: watches@stephanides.com

CZECH REPUBLIC

Klenoty Aurum
Spol. S r. o
U Libenskeho
Pivovaru 10
CZ-180 00 Prag 8
tel: +420 284829165
fax: +420 266315231

EGYPT

Link Watches
17 El Shaheed Mahmoud El Ashry St
Helipolis, Cairo
Egypt
tel: [20] 2 2690 00 01 / 2
fax: [20] 2 2690 00 03

ESTONIA

OÜ Megafort
Kuldnoka 4
50404 Tartu
tel/fax: 372-742-0179

FINLAND

Oy Perkkio
Rälssintie 6, PL 40
SF-00721 Helsinki
tel: +358-9-47 80 500
fax: +385-9-4780 5480

FRANCE

Fossil France
Rue de Martelberg
BP 80023 MONSWILLER
67701 SAVERNE Cedex
FRANCE
tel: 33 3 88 02 18 08
fax: 33 3 88 02 18 09

GERMANY

Fossil European Services
Company GmbH
-Service-
DHL Logistiklager/LDB
Werkstrasse 17
77815 Bühl
tel: +49-1805 456450
fax: +49-861-98983-6001

GREECE

Symbol Hellas Isagogiki
185, Syngrou Ave.
GR-17121 N.Smirni
tel: 30-210-93-59426
fax: 30-210-933-9325

HONG KONG

Fossil (Asia) Ltd.
Unit C & D
6/F, CDW Bldg.
388 Castle Peak Rd.
Tsuen Wan, N.T.
Hong Kong
tel: [852] 2416 2710
fax: [852] 2413 4869 /
[852] 2416 2292

HUNGARY

KZM
Király u. 52
1068 Budapest Hungary
tel/fax: +36 1 413 3865

ICELAND

Ingimar Gudmundsson ehf.
Skiopholt 50B
125 Reykjavik
Iceland
tel: [354] 511-5500
fax: [354] 511-5509

INDIA

Fossil India Pvt. Ltd.
621, 12th Main,
HAL II Stage, Indiranagar,
Bangalore 560 008
Tel: +91 80 2521 6401
Fax: +91 80 2521 6399
mail@fossilindia.com

ISRAEL

D.A. Sports Agencies
13, Kinneret St.
51201 Bnei-Brak
tel: +972 [0]3 6161718
fax: +972 3579 5556

ITALY

Fossil Italia SRL
Via Vecchia Ferriera, 4
36100 Vicenza - Italia
tel: 39/0444/955955
fax: 39/0444/955956

JAPAN

5/F, YASUDA WAREHOUSE B Bldg,
3-9, Moriyacho, Kanagawa-ku,
Yokohama,
Kanagawa, 221-0022 Japan
tel: 03-5992-4611
fax: 045-450-6243

JORDAN

Abu Shakra Trading
P.O. Box 6971
11118 Amman
Jordan
tel: +962-6-5817173
fax: +962-6-5824003

KINGDOM OF BAHRAIN

Y. A. W.
Al Hawaj & Sons Co.
P.O. Box 891
305 Manama
tel: +973-17-230-088
fax: +973-17-240-011

KOREA

Fossil (Korea) Limited
41F, Gangnam Finance Center,
737 Yeoksam-dong, Gangnam-gu,
Seoul 135-984, Korea
tel: +82.2.2008.4575
fax: +82.2.2008.4555

KUWAIT

AL Yasra DC
Block 11
Sabhan industrial area
13033 Kuwait
tel: +965 2249300
fax: +965 2249301

KZAKHSTAN/UZBEKISTAN

Peregrine Co. Ltd.
Abilay Khan av., 27 - 52
KZ-480091 Almaty
tel: +7 32 72 714 191
fax: +7 32 72 711 694

LEBANON

KHALIL FATTAL ET FILS S.A.L.
Sin El Fil - Jisr El Wati - Fattal Bldg.
Beirut
tel: 00961 1 512 002
ext: 337 - 340.

MALAYSIA

Fossil Time Malaysia Sdn Bhd
Unit #27 02, Level 27th Floor
Menara TA One
22 Jalan P Ramlee
50250 Kuala Lumpur
MALAYSIA
tel: 603 2161 1368
fax: 603 2161 5168

MALTA

Sterling Holdings Co. Ltd.
Sterling House 42
Valetta VLT 10
tel: 00356 2124 5999
fax: 00356 2123 8430

MAURITIUS

Mad's Watch Company
Sunset Boulevard
Coastal Road
Grand Bay
tel: +[230] 263 4527

MEXICO

Tiempo Digital, S.A. de C.V.
Hidalgo 480 Pte
Col. Centro
Monterrey, N.L.
C.P. 64000
tel: 8989.8633
distributor:
Grupo Japme, S.A. de C.V.
tel: [81] 8114.9741

MOLDOVA

SEPS PLUS

8, Aldea-Teodorovic St.

2064 Kishinev

tel: + 373 22 58 23 77

fax: + 373 22 58 28 16

NETHERLANDS

De Horlogemaker

Nieuwe Steen 2D, [2nd stock]

NL-1625 HV Hoorn

The Netherlands

tel: +31 229-214508

fax: +31 229-273847

email: info@dehorlogemaker.nl

NEW ZEALAND 1

Fossil (NZ) Ltd

Unit T

20 Cain Rd

Penrose

Auckland

NZ

NEW ZEALND 2

Fossil (NZ) Ltd

PO Box 12420

Penrose

Auckland

tel: 09 571 9982

fax: 09 571 0083

NORWAY/SWEDEN/DENMARK

Fossil Scandinavia AB

Att: Service

P.O. Box 1227

501 12 Borås

Sweden

Visiting:

Sven Eriksons Väg 10

Rydboholm

POLAND

Anyro & Co Sp. z o.o.

35/37 Szyszkowa Street

02-285 Warszawa, PL

tel: 48 22 464 59 50

fax: 48 22 464 58 98

PORTUGAL

IN TIME LDA

RUAL DO ALECRIM, 53-R/C

1200-014 LISBOA

tel: +351 213 460 295

fax: +351 213 460 297

QATAR

Blue Salon

Suhaim Bin Hamad Street

PO Box 6255

Doha, Qatar

tel: (974) 44 66 111

fax: (974) 44 66 112

www.bluesalon.com

SAUDI ARABIA

Al Sawani Group

PO Box 9411

Jeddah 21413 Saudi Arabia

tel: (966) 2691-2612 ext. 277

fax: (966) 2691-1320

SINGAPORE

Fossil Stores

Pacific Plaza

09 Scotts Road

03-08

Singapore 228210

tel: (65) 6835 2143

SLOVAKIA

Montre s.r.o

Drienova 34

821 02 Bratislava

tel: +421 02 43 63 1303

tel/fax: +421 02 43 63 1301

email: info@montre.sk

SLOVENIA

Bioline Plus d.o.o.
Peruzzijeva 41
SLO – 1000 Ljubljana
tel: +386-1-428-8494
fax: +386-1-428-8797
email: bioline@siol.net

SOUTH AFRICA

S. Keren Watch Group
7 Little St.
Green Point,
Cape Town 8005, RSA
tel: [2721] 418-0045
fax: [2721] 418-0050

SPAIN

Fossil Spain
Avda. Diagonal 463, bis 9º planta
08036 Barcelona
Spain
tel: +34 93 363 38 70
fax: +34 93 410 93 54

SWITZERLAND

No Time AG
Hardstr. 43
CH-4020 Basel
tel: [4161] 377-8200
fax: [4161] 377-8202
email: info@notime.ch

TAIWAN

Fossil (Asia) Holdings Ltd. Taiwan
Branch
1/F No.23, Lan 177, Sec 1,
Tun Hua S. Rd,
Taipei, Taiwan
Tel: [886] 2 8773 5592
Fax: [886] 2 8771 4477

TUNISIE

GUEPARD OPTIC
6-8, Avenue Farhat Hached, 1er Etage,
1000 Tunis - Tunisie
tel : [00 216] 71 245 510 / 71 245 511
fax : [00 216] 71 245 512
email : gue01@guepard-optic.com.tn

TURKEY

Buyukdere Caddesi Ucyol Mevkii
Noramin Is Merkezi No:55 B-2
Maslak-ISTANBUL
tel: +90 212 444 72 28
fax: +90 212 328 36 66
www.saatvesaat.com

UKRAINE

Vector D3
Chkalov 33
49000 Dneporpetrovsk
tel: +38 056 744 45 06
fax: +38 056 770 20 05

U.A.E.

Al-Futtaim Watches & Jewellery
P.O. BOX 7916 Dubai
United Arab Emirates
tel: [971] 4-2224142/
2053361
fax: [971] 4-2224599

UNITED KINGDOM

Service Centre
PO Box 7296
Milton Keynes
MK13 9ZH
tel: 08707 707253
fax: 08707 707254

U.S.A.

Metro Service Center
10615 Sanden Drive
Dallas, TX 75238-1720
tel: 800-699-8911

NOTE:

For a list of the most recent authorized service centers, please go to www.adidas.com/watches.

HINWEIS:

Eine Liste der jüngst autorisierten Service-Center finden Sie unter www.adidas.com/watches.

REMARQUE :

Pour obtenir une liste des centres de service agréés les plus récents, consultez le site www.adidas.com/watches.

NOTA:

Per un elenco di centri di assistenza autorizzati più di recente, si prega di visitare il sito www.adidas.com/watches.

NOTA:

Para ver una lista de los centros de asistencia técnica autorizados más recientes, visite www.adidas.com/watches.

OBSERVAÇÃO:

Para obter uma lista dos centros de assistência autorizados mais recentes, consulte www.adidas.com/watches.

注記:

最新の公認サービスセンターの一覧は www.adidas.com/watches にてご覧いただけます。

注意:

如果需要最新的授权服务中心列表, 请到 www.adidas.com/watches 查询。

참고:

공식 서비스 센터의 최신 목록은 www.adidas.com/watches 웹사이트를 방문해 주십시오.

CERTIFICATE OF WARRANTY

The CERTIFICATE OF WARRANTY that follows below is to be completed at time of purchase by the retail store where you purchased your watch.

Der folgende GARANTIESCHEIN ist zum Zeitpunkt des Kaufs durch den Einzelhändler auszufüllen, bei dem der Kauf erfolgt.

Le CERTIFICAT DE GARANTIE suivant doit être complété au moment de l'achat par le détaillant vous vendant la montre.

Il CERTIFICATO DI GARANZIA seguente deve essere compilato dal rivenditore al momento dell'acquisto dell'orologio.

El siguiente CERTIFICADO DE GARANTÍA deberá ser cumplimentado en el momento de la compra por la tienda minorista en la que compró su reloj.

O CERTIFICADO DE GARANTIA que se segue deve ser preenchido no momento da compra pela loja de retalho que lhe vende o relógio.

以下の保証書は、ご購入時に販売店によって記入される必要があります。

以下保修证明应在您购买手表时由销售该手表的零售店填写。

시계를 구입하신 소매점에서 다음 보증서를 작성하시기 바랍니다.

Model Number:
Modellnummer:
Modèle :
Numero di modello:
Número del modelo:
Número do modelo:
モデルナンバー:
型号:
모델 번호:

Sold To:
Verkauft an:
Vendu à :
Venduto a:
Vendido a:
ご購入者:
买方:
구매자:

Sold By:
Verkauft durch:
Vendu par :
Venduto da:
Vendido por:
Vendido por:
販売店:
卖方:
판매자:

Country/Date:
Land/Datum:
Pays/Date :
Luogo/data:
País/Fecha:
País/data:
国/ご購入日:
国家 / 日期:
국가/날짜:

Vendor Stamp:
Stempel des Händlers:
Cachet du revendeur :
Timbro del rivenditore:
Sello del vendedor:
Carimbo do vendedor:
販売店スタンプ:
销售单位盖章:
판매점 스탬프:

NOTICES

DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC EQUIPMENT

The symbol indicates that this product shall not be mixed with unsorted municipal waste when disposed of. There is a separate collection system for waste electrical and electronic equipment. Usually old electrical and electronic equipment can be returned free of charge. For further information please contact the competent municipal authorities or the shop where you purchased the product. Correct disposal ensures that waste electrical and electronic equipment is recycled and reused appropriately. It helps avoid potential damage for the environment and human health and to preserve natural resources.



Hg Pb

ENTSORGUNG VON ALTEM ELEKTRISCHEN UND ELEKTRONISCHEN MATERIAL

Das Symbol besagt, dass dieses Produkt bei der Entsorgung nicht mit unsortiertem, kommunalen Abfall gemischt werden darf. Für elektrischen und elektronischen Abfall existiert ein eigenes Sammelsystem. Normalerweise kann altes elektrisches und elektronisches Material kostenfrei entsorgt werden. Für weitere Informationen kontaktieren Sie bitte fachkundige kommunale Behörden oder das Geschäft, in dem Sie das Produkt erworben haben. Korrekte Entsorgung stellt sicher, dass elektrisches und elektronisches Material recycled und angemessen wiederverwertet wird. Dies trägt dazu bei, mögliche Schäden für die Umwelt und menschliche Gesundheit zu vermeiden sowie natürliche Ressourcen zu erhalten.

SMALTIMENTO DEI RIFIUTI DI DISPOSITIVI ELETTRICI ED ELETTRONICI

Il simbolo indica che questo prodotto non deve essere mescolato con i normali rifiuti urbani quando non più funzionante. I dispositivi elettrici ed elettronici devono essere raccolti e smaltiti separatamente. I dispositivi elettrici ed elettronici fuori uso oppure obsoleti possono essere restituiti gratuitamente. Per ulteriori informazioni contattate le autorità comunali competenti o il negozio in cui avete comprato il prodotto. L'eliminazione corretta dei rifiuti elettrici ed elettronici evita lo spreco e consente che tali dispositivi vengano riciclati correttamente ed eventualmente riutilizzati; questo contribuisce ad evitare danni potenziali per l'ambiente e la salute umana ed a conservare le risorse naturali. Infrazioni alle clausole per lo smaltimento di oggetti elettrici o elettronici saranno punite secondo il regolamento in vigore.

ÅTERVINNING AV GAMMAL ELEKTRISK OCH ELEKTRONIK UTRUSTNING

Symbolen indikerar att denna produkt inte skall blandas med osorterade sopor. Det finns ett separat system för återvinning av elektrisk och elektronik utrustning. Vanligtvis kan gammal elektrisk och elektronisk utrustning lämnas gratis. För ytterligare information, vänligen kontakta de kommunala myndigheterna eller butiken där du köpte varan. Korrekt återvinning försäkras att elektrisk och elektronisk utrustning hanteras på ett korrekt sätt. Det undviker potentiell skada på naturen samt mänsklig hälsa och sparar på natur resurserna.

VERWIJDERING VAN OUDE ELEKTRISCHE EN ELEKTRONISCHE APPARATEN

Het symbool geeft aan dat dit product niet verwijderd mag worden met ongesorteerd gemeentelijk afval. Er bestaan speciale verzamelpunten voor oude elektrische en elektronische apparaten. Gewoonlijk kunnen deze apparaten zonder kosten geretourneerd worden. Voor meer informatie kunt u contact opnemen met de gemeente of de winkel waar u uw product gekocht heeft. Correcte verwijdering zorgt er voor dat elektrische en elektronische apparaten op de juiste manier gerecycled en hergebruikt kunnen worden. Het draagt bij aan het voorkomen van milieuvervuiling en helpt de volksgezondheid en de natuurlijke hulpbronnen te beschermen.

DISPOSITIONS RELATIVES AUX DÉCHETS ÉLECTRIQUES ET ÉLECTRONIQUES

Ce symbole signifie que ce produit ne doit pas être collecté et mélangé aux ordures ménagères classiques, mais avec les déchets électriques et électroniques. Les déchets électriques et électroniques peuvent habituellement être déposés gratuitement à la décharge. Pour plus de renseignements, vous pouvez vous adresser à la municipalité la plus proche de chez vous ou retourner au magasin où vous avez acheté le produit. Les matériaux seront traités et valorisés dans le respect de l'environnement. Cette démarche permet d'éviter tout dommage pour l'environnement et votre santé, et permet de préserver les ressources naturelles.

ELIMINACIÓN DE EQUIPOS ELÉCTRICOS Y ELECTRÓNICOS ANTIGUOS

El símbolo indica que, al desechar este producto, no debe mezclarse con residuos urbanos no seleccionados. Existe un sistema de recogida independiente para los residuos de equipos eléctricos y electrónicos. Normalmente los equipos electrónicos y eléctricos disponen de un sistema de recogida independiente para los residuos. Para más información, póngase en contacto con las autoridades municipales competentes o con el establecimiento en el que adquirió el producto. La eliminación correcta garantiza que los residuos de equipos eléctricos y electrónicos se reciclen y se reutilicen adecuadamente. Ayuda a evitar el daño potencial para el medio ambiente y la salud humana y a preservar los recursos naturales.

Certain watch styles are fitted with lithium batteries which may contain perchlorate material - special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate for more information.